 


SPARE PARTS

螺帽扳手

ER螺帽扳手

Spanner for ER nut

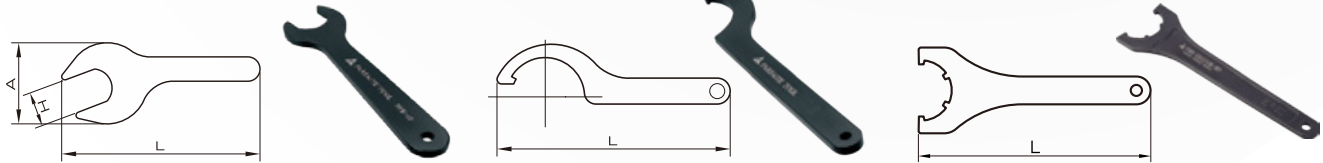


Order No. 訂購編號	A	H	L	NUT 適用螺帽
PHS-ER11	40	17	120	CAP-ER11
PHS-ER16	53	25	140	CAP-ER16
PHS-ER20	60	30	160	CAP-ER20

Order No. 訂購編號	L	NUT 適用螺帽
PHS-ER25	170	CAP-ER25
PHS-ER32	205	CAP-ER32
PHS-ER40	241	CAP-ER40

Order No. 訂購編號	L	NUT 適用螺帽
PHS-ER25UM/RD	170	CAP-ER25
PHS-ER32UM/RD	205	CAP-ER32
PHS-ER40UM/RD	241	CAP-ER40

ER-M 螺帽扳手

 
Spanner for ER-M nut

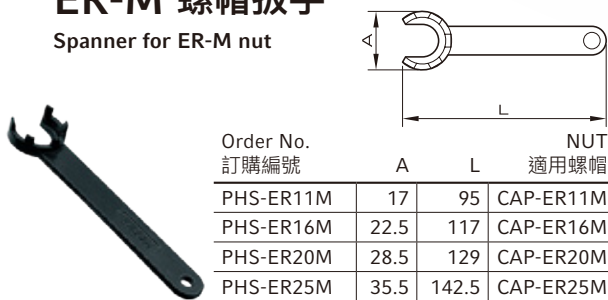

Order No. 訂購編號	A	L	NUT 適用螺帽
PHS-ER11M	17	95	CAP-ER11M
PHS-ER16M	22.5	117	CAP-ER16M
PHS-ER20M	28.5	129	CAP-ER20M
PHS-ER25M	35.5	142.5	CAP-ER25M

ER-MS 螺帽扳手

 
Spanner for ER-MS nut

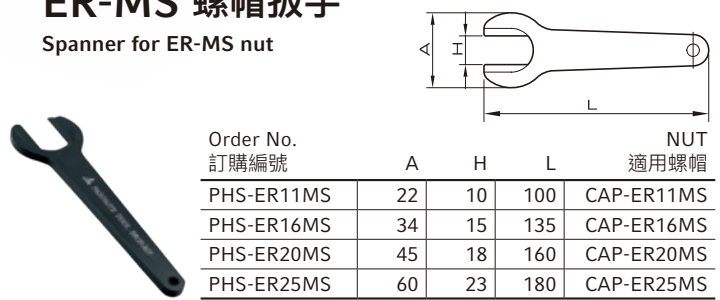

Order No. 訂購編號	A	H	L	NUT 適用螺帽
PHS-ER11MS	22	10	100	CAP-ER11MS
PHS-ER16MS	34	15	135	CAP-ER16MS
PHS-ER20MS	45	18	160	CAP-ER20MS
PHS-ER25MS	60	23	180	CAP-ER25MS

ER-B/ER-BR 螺帽扳手

 
Spanner for ER-B/ER-BR nut

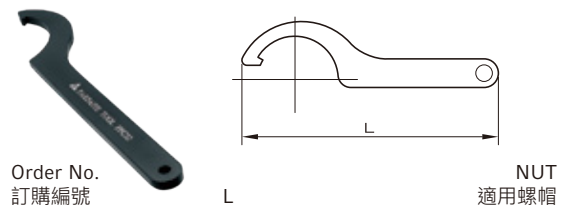

Order No. 訂購編號	L	NUT 適用螺帽
PHS-ER11B	107	CAP-ER11B/CAP-ER11BR
PHS-ER16B	136	CAP-ER16B/CAP-ER16BR
PHS-ER20B	171	CAP-ER20B/CAP-ER20BR
PHS-ER25	170	CAP-ER25B/CAP-ER25BR
PHS-ER32	205	CAP-ER32B/CAP-ER32BR
PHS-ER40	241	CAP-ER40B/CAP-ER40BR

PFK 螺帽扳手

 Spanner for PFK nut

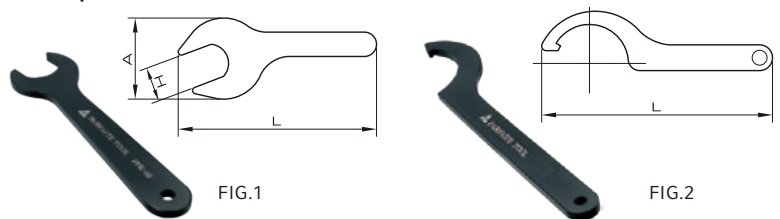

Order No. 訂購編號	A	H	L	FIG	NUT 適用螺帽
PHS-PFK6	39	18.1	152.8	1	CAP-PFK6
PHS-PFK10	50	25.5	174.5	1	CAP-PFK10
PHS-ER25	-	-	170	2	CAP-PFK16
PHS-ER32	-	-	205	2	CAP-PFK25

刀把扳手

ISO 刀把扳手


Spanner for ISO
Tool Holder



Order No. 訂購編號	H	L	TOOL HOLDER 適用刀把
PHS-ISO20	24	140	ISO20
PHS-ISO25	27	145	ISO25
PHS-ISO30	31	210	ISO30

PFC 刀把扳手

 Spanner for PFC
Tool Holder

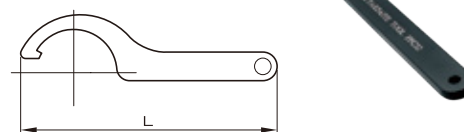

Order No. 訂購編號	L	TOOL HOLDER 適用刀把
PHS-ER32	205	PFC20
PHS-ER40	241	PFC25
PHS-PFC32	242.8	PFC32