

HER 筒夾刀把 HER COLLET CHUCK



Balancing / 動平衡


Dimensions / 尺寸標示

G6.3

Max.25,000 RPM
Or $U \leq 1\text{gmm}$

Option / 選配
G2.5

Max.25,000 RPM
Or $U \leq 1\text{gmm}$

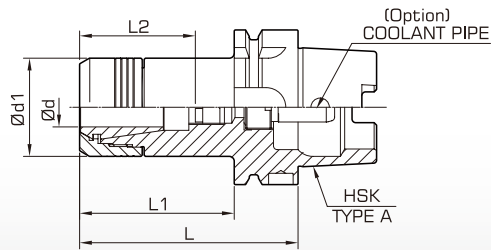

page.146

page.144

page.120

page.149



Order No. 訂購編號	Range 夾持範圍	Range ϕd	ϕd_1	L	L1	Tool Clamping Depth L2 刀具夾持深度	Nut 螺帽	Screw 調整螺絲	Collet 筒夾	Wrench 扳手
HSK50A	HER16-100	1.0~10.0	30	100	74	29~58	CAP-HER16	ER-M11	ER16-HP	PHS-20-RO300
	HER20-100	1.0~13.0	32	100	74	32~56	CAP-HER20	ER-M14	ER20-HP	PHS-20-RO320
	HER25-100	1.0~16.0	40	100	74	35~56	CAP-HER25	ER-M18	ER25-HP	PHS-20-RO400
HSK63A	HER16-100	1.0~10.0	30	100	74	29~58	CAP-HER16	ER-M11	ER16-HP	PHS-20-RO300
	HER16-160	1.0~10.0	30	160	134	29~58	CAP-HER16	ER-M11	ER16-HP	PHS-20-RO300
	HER20-100	1.0~13.0	32	100	74	32~56	CAP-HER20	ER-M14	ER20-HP	PHS-20-RO320
	HER20-160	1.0~13.0	32	160	134	32~68	CAP-HER20	ER-M14	ER20-HP	PHS-20-RO320
	HER25-100	1.0~16.0	40	100	74	35~55	CAP-HER25	ER-M18	ER25-HP	PHS-20-RO400
	HER25-160	1.0~16.0	40	160	134	35~73	CAP-HER25	ER-M18	ER25-HP	PHS-20-RO400
	HER32-100	2.0~20.0	50	100	74	41~55	CAP-HER32	ER-M22	ER32-HP	PHS-20-RO500
	HER32-160	2.0~20.0	50	160	134	41~78	CAP-HER32	ER-M22	ER32-HP	PHS-20-RO500
HSK100A	HER16-100	1.0~10.0	30	100	71	29~58	CAP-HER16	ER-M11	ER16-HP	PHS-20-RO300
	HER16-160	1.0~10.0	30	160	131	29~58	CAP-HER16	ER-M11	ER16-HP	PHS-20-RO300
	HER20-100	1.0~13.0	32	100	71	32~50	CAP-HER20	ER-M14	ER20-HP	PHS-20-RO320
	HER20-160	1.0~13.0	32	160	131	32~68	CAP-HER20	ER-M14	ER20-HP	PHS-20-RO320
	HER25-100	1.0~16.0	40	100	71	35~53	CAP-HER25	ER-M18	ER25-HP	PHS-20-RO400
	HER25-160	1.0~16.0	40	160	131	35~73	CAP-HER25	ER-M18	ER25-HP	PHS-20-RO400
	HER32-100	2.0~20.0	50	100	71	41~52	CAP-HER32	ER-M22	ER32-HP	PHS-20-RO500
HER32-160	2.0~20.0	50	160	131	41~78	CAP-HER32	ER-M22	ER32-HP	PHS-20-RO500	

Remarks / 備註

- 需配合 3 μ HP 筒夾 With 3 μ HP Grade Collet
- 若需搭配中心出水管, 請參考 page.145 規格表
- 若需出水型刀把, 請參考 page.26 選用說明
- 筒夾夾持為一對一整數值

Applications / 應用



Drilling
鑽孔



Reaming
銜孔



Endmilling
銑削



Tapping
攻牙