


ER 筒夾刀把

ER COLLET CHUCK



Dimensions / 尺寸標示

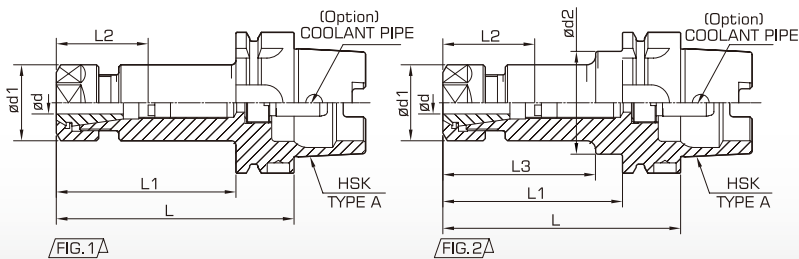

Order No. 訂購編號	FIG	Range 夾持範圍 ød	ød1	ød2	L	L1	L2 Tool Clamping Depth L2 刀具夾持 深度	L3	page.146 page.144 page.120 page.148 Nut 螺帽 Screw 調整螺絲 Collet 筒夾 Wrench 扳手				
HSK50A	ER16-100	1	0.6~10.0	28	-	100	74	29~58	-	CAP-ER16	ER-M11	ER16	PHS-ER16
	ER32-100	1	1.6~20.0	50	-	100	74	41~56	-	CAP-ER32	ER-M22	ER32	PHS-ER32
HSK63A	ER16-100	2	0.6~10.0	28	50	100	74	29~58	64	CAP-ER16	ER-M11	ER16	PHS-ER16
	ER16-160	2	0.6~10.0	28	50	160	134	29~58	120	CAP-ER16	ER-M11	ER16	PHS-ER16
	ER25-100	1	0.6~16.0	42	-	100	74	35~55	-	CAP-ER25	ER-M18	ER25	PHS-ER25
	ER25-160	1	0.6~16.0	42	-	160	134	35~73	-	CAP-ER25	ER-M18	ER25	PHS-ER25
	ER32-100	1	1.6~20.0	50	-	100	74	41~54	-	CAP-ER32	ER-M22	ER32	PHS-ER32
	ER32-160	1	1.6~20.0	50	-	160	134	41~78	-	CAP-ER32	ER-M22	ER32	PHS-ER32
HSK100A	ER40-120	1	2.6~26.0	63	-	120	94	50~68	-	CAP-ER40	ER-M28	ER40	PHS-ER40
	ER16-100	1	0.6~10.0	28	-	100	71	29~54	-	CAP-ER16	ER-M11	ER16	PHS-ER16
	ER16-160	1	0.6~10.0	28	-	160	131	29~58	-	CAP-ER16	ER-M11	ER16	PHS-ER16
	ER25-100	1	0.6~16.0	42	-	100	71	35~50	-	CAP-ER25	ER-M18	ER25	PHS-ER25
	ER25-160	1	0.6~16.0	42	-	160	131	35~73	-	CAP-ER25	ER-M18	ER25	PHS-ER25
	ER32-100	1	1.6~20.0	50	-	100	71	41~49	-	CAP-ER32	ER-M22	ER32	PHS-ER32
	ER32-160	1	1.6~20.0	50	-	160	131	41~78	-	CAP-ER32	ER-M22	ER32	PHS-ER32
	ER40-120	1	2.6~26.0	63	-	120	97	50~68	-	CAP-ER40	ER-M28	ER40	PHS-ER40

Remarks / 備註

- 若需搭配中心出水管，請參考 page.145 規格表
- 若需出水型刀把，請參考 page.26 選用說明

Applications / 應用

